


4004 FIRE ALARM CONTROL SYSTEM OPERATING INSTRUCTIONS FOLLOWING AN ALARM/SUPERVISORY/TROUBLE CONDITION



YOUR SAFETY, AS WELL AS THE SAFETY OF THOSE AROUND YOU, ALWAYS COMES FIRST.
Actions taken during a fire depend upon local practices. Be sure you know what to do.

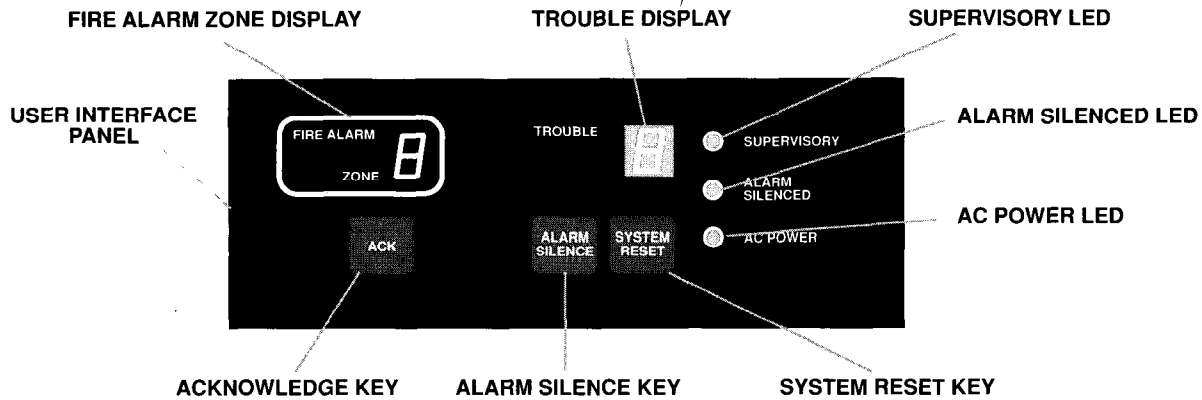

PANEL OPERATION

ALARM - SUPERVISORY* - TROUBLE CONDITION
System Displays Flashing. Tone On
*Supervisory LED Flashing

How to Acknowledge the Abnormal Condition

1. Unlock and open the fire alarm control panel door. Read the display(s) (Fire Alarm Zone, Trouble, or both); the display(s) will indicate the zone number for the zones with abnormal conditions.
2. Press the "ACK" (Acknowledge) key located on the User Interface Panel until the tone alert (piezo) is silenced.

Notes:

- A. Fire Alarm and Trouble conditions in the system are indicated on the system displays; the displays automatically scroll through the list of Fire Alarm Zone(s) and Trouble(s) in the system. You can also manually scroll through the list to review the status of alarm(s) and trouble(s) by using the "ACK" key.
 - B. You can only view Supervisory conditions by manually scrolling when the yellow Supervisory LED flashes. Use the "ACK" key to review the status of Supervisory points. Supervisory points are displayed after the alarm points and before any system troubles.
3. Review the Fire Alarm Zone and Trouble Display(s). Summon appropriate personnel to respond. Supervisory conditions appear on the red Fire Alarm Zone Display (Supervisory = zone number with decimal point).

PANEL OPERATION (Continued)

How to Silence Alarm Signals

- Press "ALARM SILENCE" key on the user interface panel.
- The "ALARM SILENCED" LED turns on and remains on steady.

How to Reset the System

1. Restore/replace all affected devices (smoke alarms, pull stations, etc.) in accordance with the instructions provided with each device.
2. Press the "SYSTEM RESET" key.
 - System resets within 15 seconds. Dash (-) is displayed on both the Fire Alarm Zone and Trouble Displays while system reset is in progress. After 15 seconds, the displays indicate that the system is normal (cleared displays and LEDs with only the "AC POWER LED" illuminated).

System Lamp Test

- Press the "ACK" key for five seconds.
- The red and yellow seven-segment displays (all segments), system piezo, Power On, Alarm Silenced, and Supervisory LEDs turn on and remain on until the "ACK" key is released.

In case of trouble, notify:

Name _____
Address _____
Phone # _____

THESE INSTRUCTIONS ARE INTENDED TO BE FRAMED AND MOUNTED ADJACENT TO THE CONTROL PANEL FOR READY REFERENCE.
SEE OPERATING INSTRUCTIONS FOR DETAILED OPERATION.



www.BevanSecurity.Com