



## Model 5207 Fire Alarm Built-in Touchpad Operating Instructions

These instructions must be framed and displayed next to the Model 5207 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

### Basic Operation of Built-in Touchpad

Function	Keystrokes
System test*	[0] [ENTER]
Reset alarms (or smoke detectors)*	[1] [ENTER]
Clear alarm memory*	[2] [ENTER]
Reset dialer	[3] [ENTER] + code 0 or 1
Start download	[4] [ENTER] + code 0 or 1
Alarm memory display	[5] [ENTER]
Display troubles	[6] [ENTER]
Silence troubles or alarms*	[7] [ENTER] + code, or [SILENCE] + code
Disable/Enable zones	Zone # + [DISABLE]
Begin fire drill	[2] [0] [ENTER] + code 0 or 1
<i>The system sounds an alarm and reports a fire test when you exit fire drill mode.</i>	
End fire drill	[SILENCE] + code 0 or 1
Walk test	[2] [2] [ENTER] + code
Zone Troubleshooting mode	[2] [5] [ENTER] + code
Step Programming mode	[2] [7] [ENTER] + code 0

Function	Keystrokes
Set date* For example, to set the date of Jan. 13, 1995, enter:	[8] [ENTER] + 6-digit date Use <i>mmddy</i> format for date, where: <i>mm</i> = Month (enter leading 0 for 1-digit months) <i>dd</i> = Day (enter leading 0 for 1-digit days) <i>yy</i> = Year [0] [1] [1] [3] [9] [5]
Set time* For example, to set the time of Wed., 4:30 p.m., enter:	[9] [ENTER] + 6-digit date Use <i>wdhhmm</i> format for time, where: <i>w</i> = Day of week (0=Sun., 1=Mon., 2=Tue., 3=Wed., 4=Thu., 5=Fri., 6=Sat.) <i>d</i> = Time of day (0=AM, 1=PM) <i>hh</i> = Hour (enter leading 0 for 1-digit hrs.) <i>mm</i> = Minutes (enter leading 0 for 1-digit min.) [3] [1] [0] [4] [3] [0]
To exit download, set date, and set time modes, press [CLEAR] [CLEAR].	

\* These functions do not require you to enter a valid operating code unless the **NEED CODE AT PANEL** option is selected during programming.

For service call:

Bevan Security Systems Inc.  
(856) 461-2234