

12120 OPERATING INSTRUCTIONS

Alarm Operation

In case of alarm, the *System Alarm* LED flashes, LCD will display alarm conditions and the panel buzzer sounds. Local audible and visual signals and remote alarm signals operate.

When an alarm occurs, proceed according to the established emergency plan. Assure that all personnel are accounted for, and notify the Fire Department to advise of the alarm and/or verify that an automatic signal has been received at the Fire Department.

Authorized Personnel Only

To silence the alarm:

To silence the notification appliances after evacuation, where permitted, press the **Alarm Silence** switch. The notification appliances and panel buzzer will be silenced, and LED indications will change from flashing to continuous. The *Alarm Silenced* LED will be lit.

Note: Do not reset the panel until the alarm has been cleared.

Warning: Alarm silence inhibit (if set) prevents the alarm from being silenced for a predetermined time.

To reset panel after alarm:

When the alarm condition is corrected, return the panel to normal standby operation by pressing the **System Reset** switch.

Trouble Operation

Trouble is indicated by:

System Trouble LED flashes
LCD will display trouble conditions
Panel buzzer sounds

To silence the trouble buzzer:

Press the **Trouble Silence** switch. The *Trouble Silenced* LED lights and the specific trouble LED(s) may change to continuous display. When the trouble condition has been cleared, you may need to reset the panel to restore to a normal standby condition.

Warning: Leaving the panel in a trouble condition may cause a fire alarm condition not to initiate a fire alarm sequence

Normal Standby Condition

The green *AC Power On* LED will be lit and no other indicators on.

For service, contact: _____
Telephone Number: _____

Frame these instructions and mount them near the control unit for operator reference.