

## MPC-2000 OPERATING INSTRUCTIONS

### ALARM OPERATION OF THE FIRE ALARM SYSTEM

#### AN ALARM IS INDICATED BY:

- The red SYSTEM ALARM L.E.D. lights.
- The yellow SYSTEM TROUBLE L.E.D. lights.
- The trouble buzzer sounds.

Notify the proper personnel to institute preplanned Fire Alarm Procedures: \_\_\_\_\_

Telephone the Fire Department. (Phone No.: \_\_\_\_\_),  
to advise of the alarm and/or verify that an automatic signal  
has been received at the Fire Department.

### AUTHORIZED PERSONNEL ONLY

#### TO SILENCE THE TROUBLE BUZZER:

Press the TROUBLE SILENCE SWITCH.

#### TO SILENCE THE BUILDING ALARM SIGNALS:

Momentarily push the ALARM SILENCE SWITCH. The ALARM SILENCE L.E.D. will light, indicating the building alarm signals are off.

NOTE: If any initiating or indicating circuit(s) has been programmed for non-silence operation, once alarmed its designated building alarm signals cannot be silenced.

#### TO RESET AFTER AN ALARM:

First, the device which caused the alarm must be reset.  
Momentarily press the SYSTEM RESET switch.

If a trouble condition still exists, notify the proper personnel for servicing the system immediately.

### TROUBLE OPERATION OF THE FIRE ALARM SYSTEM

#### A TROUBLE IS INDICATED BY:

- The yellow SYSTEM TROUBLE L.E.D. lights.
- The trouble buzzer sounds.

#### TO SILENCE THE TROUBLE BUZZER:

Momentarily press the TROUBLE SILENCE Switch.

Notify the proper personnel for servicing the system immediately.  
Institute alternate Fire Alarm Procedures.

**SEE THE OWNERS MANUAL (P/N 444851B) FOR FURTHER DETAILS.**

#### LOCAL SERVICE REPRESENTATIVE

NAME: \_\_\_\_\_ PHONE: \_\_\_\_\_

ADDRESS: \_\_\_\_\_ CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP: \_\_\_\_\_